



Floating Frame Supports - Single Bay

PH: 800-868-9910
www.designcomponents.com


Required Information to order:
Purlin Spacing?
Stand-Off Dimension? (See Step 8)



1. Install first side support.



2. Side supports overhang purlins approx. 6" on each end.

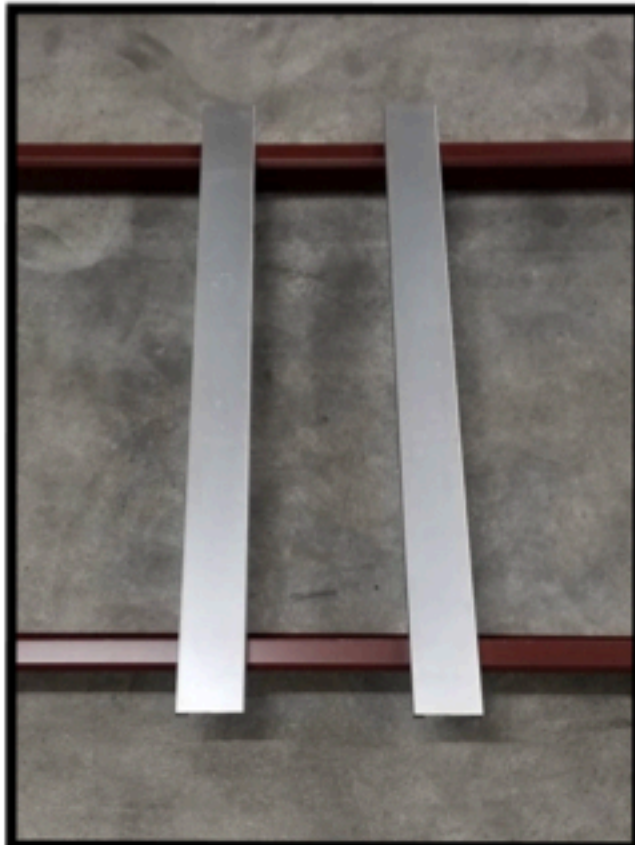

3. Line up second side support to match your Curb I.D.




4. Install Hold-Down clips at all four Purlin/Support end conditions.




Floating Frame Supports - Single Bay

PH: 800-868-9910
www.designcomponents.com


Required Information to order:
Purlin Spacing?
Stand-Off Dimension? (See Step 8)

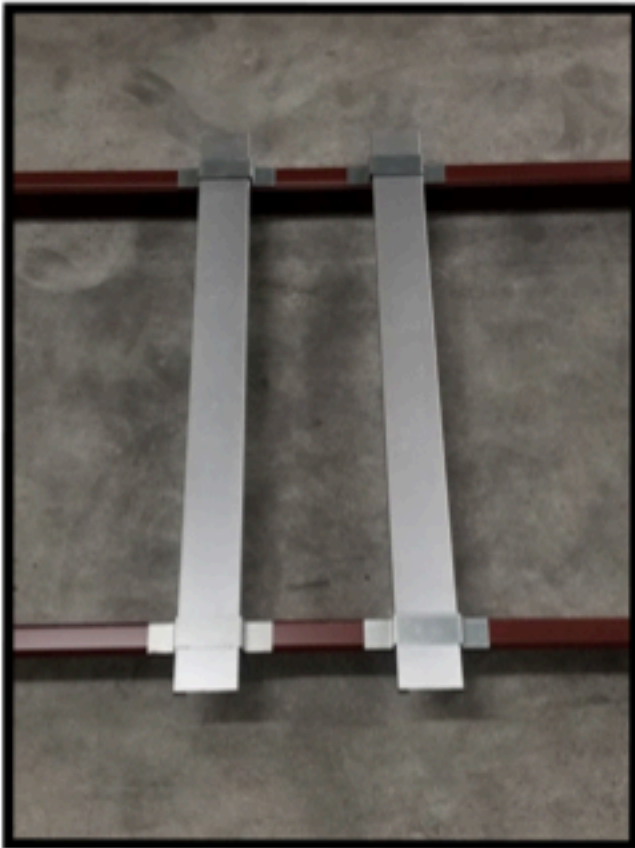


5. All Hold-Down clips installed.

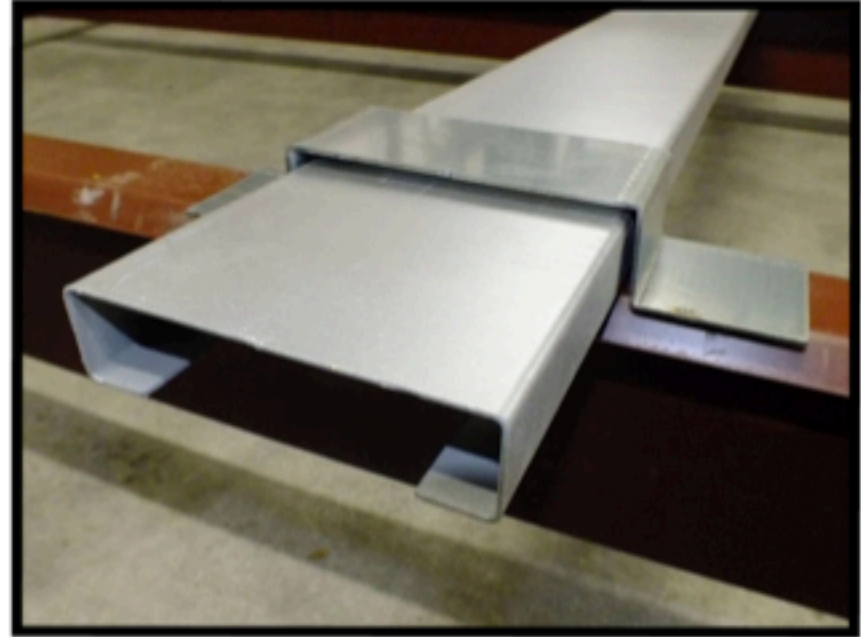

6. The gap between the Hold-Down clips and the side supports allows for proper movement with the roof panels.

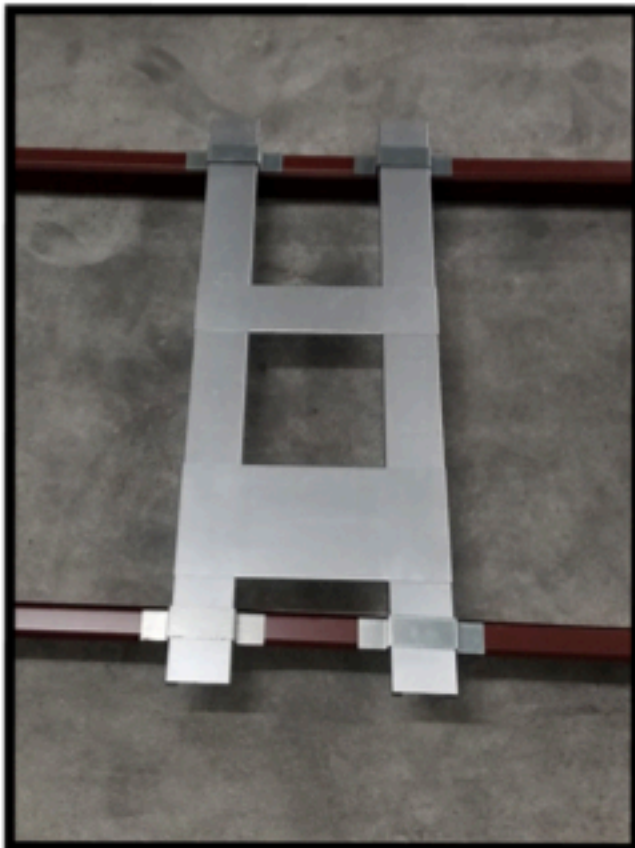

7. Line up both end supports to match your curb I.D.

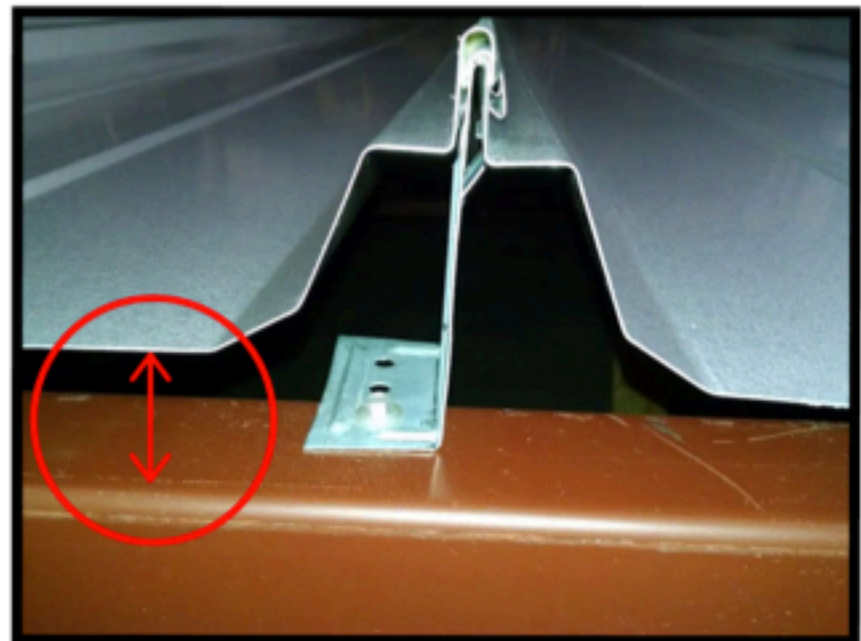

8. The Stand-Off Dimension is the gap distance between the top of the Purlin and the bottom of the roof panel.